 


# INSTRUCTIONS OF HOME APPLIANCES


## TV remote control

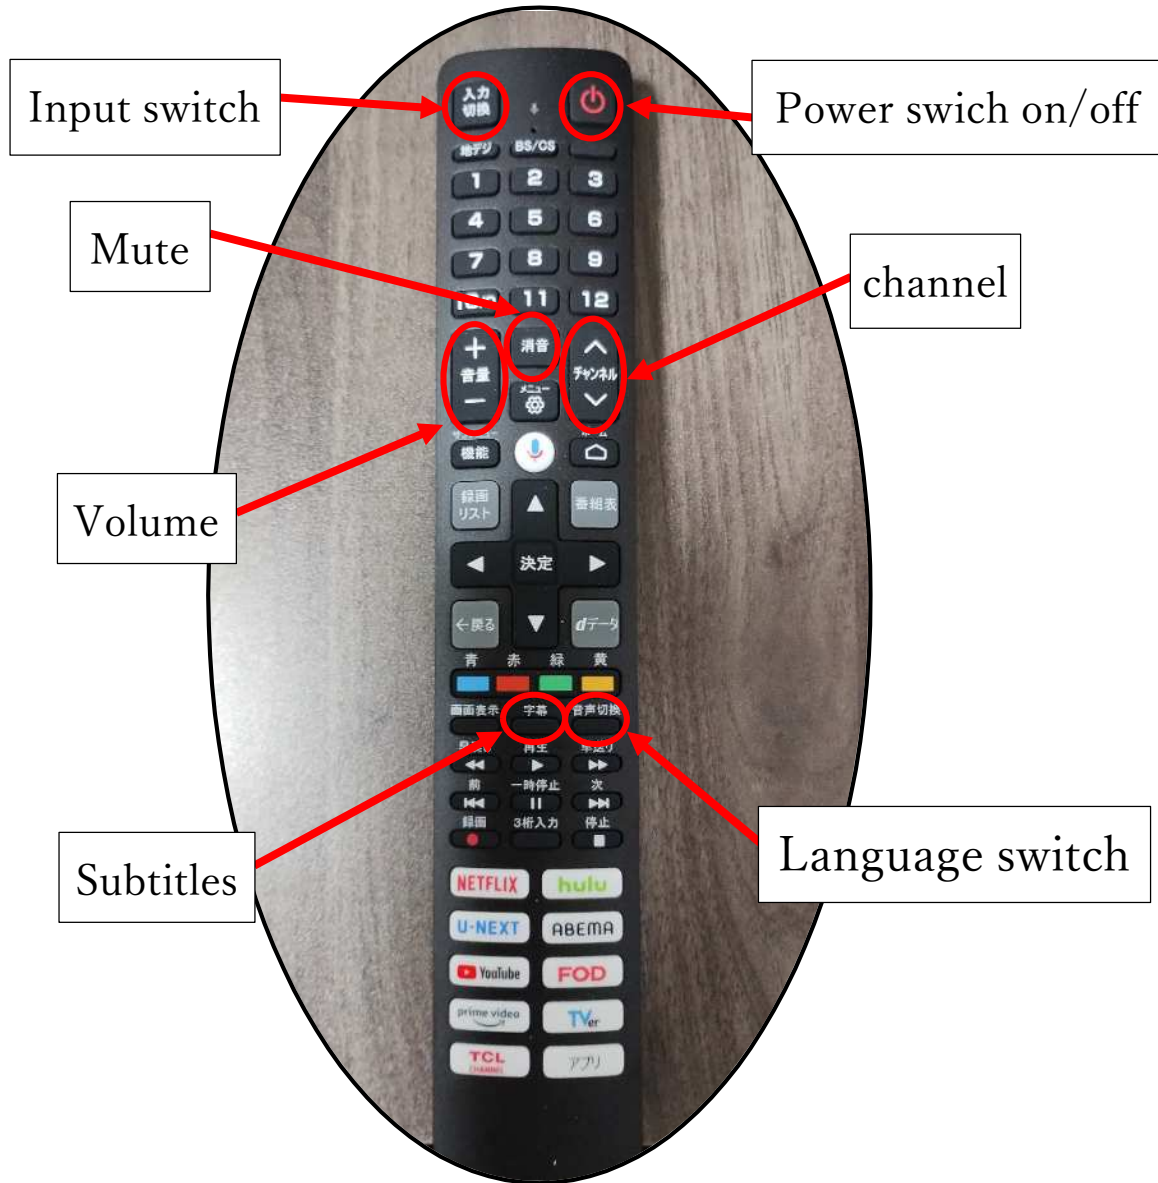

# INSTRUCTIONS OF HOME APPLIANCES

## Air conditioner remote control

## Water heater remote control

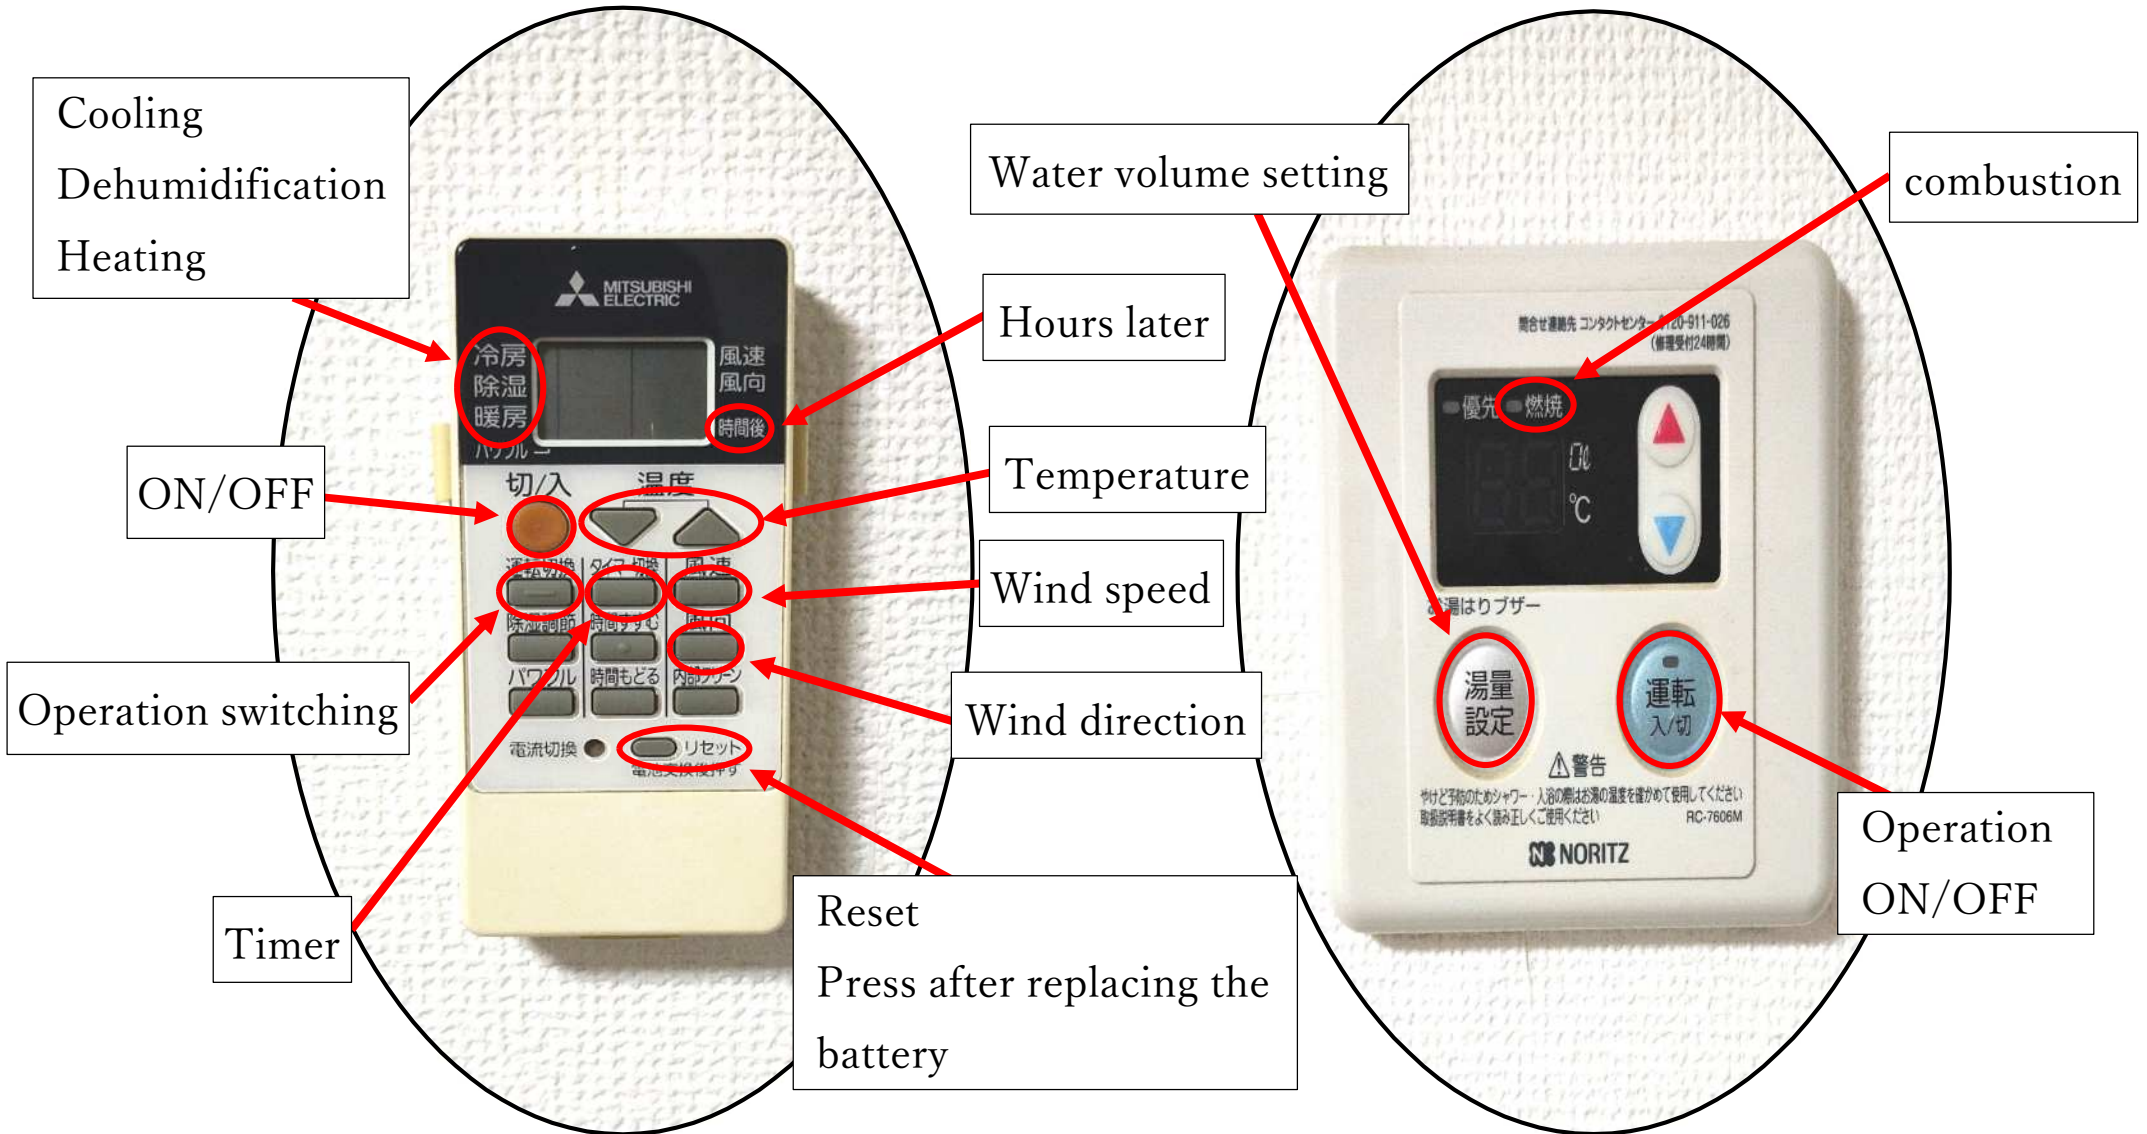

# INSTRUCTIONS OF HOME APPLIANCES

breaker

## Safety Breaker

The power has been tripped due to excessive use of electricity in that room, so turn off all electrical devices in the room.

Then turn the safety breaker on.

## Ampere Breaker

An ampere breaker will trip if too much electricity is used throughout the house.

For this reason, turn off all electrical appliances that you are using.

After that, turn the ampere breaker on.

If you use electrical appliances in the same way as before the breaker tripped, there is a high chance that it will trip again, so turn them on one by one to avoid using too much at once.

## Earth leakage breaker

1. Turn off all safety breakers once
2. Turn on the earth leakage breaker
3. Turn on the safety breakers one by one
4. If the earth leakage breaker trips again during the process, there is a high possibility that the circuit that was turned on at the time is leaking
5. Turn off the safety breaker of the circuit with the leak
6. Turn on the earth leakage breaker again
7. Turn on the safety breakers of the circuit other than the one with the leak
8. If you cannot determine the cause, or if it is likely due to deteriorated wiring, contact the management company and have them deal with the problem.



※Please do not use hair dryers, electric kettles, and microwaves at the same time, as this will cause the circuit breaker to trip.

# INSTRUCTIONS OF HOME APPLIANCES

## Induction stove

※ ・ Please place a pot on the stove before use. The sensor will not react and the stove will not heat.  
 ・ There is a risk of fire, so be sure to stay close to the stove when using it.




Fried food  
on/off

Heating  
on/off

Power switch  
※Press for 2 seconds

## microwave oven

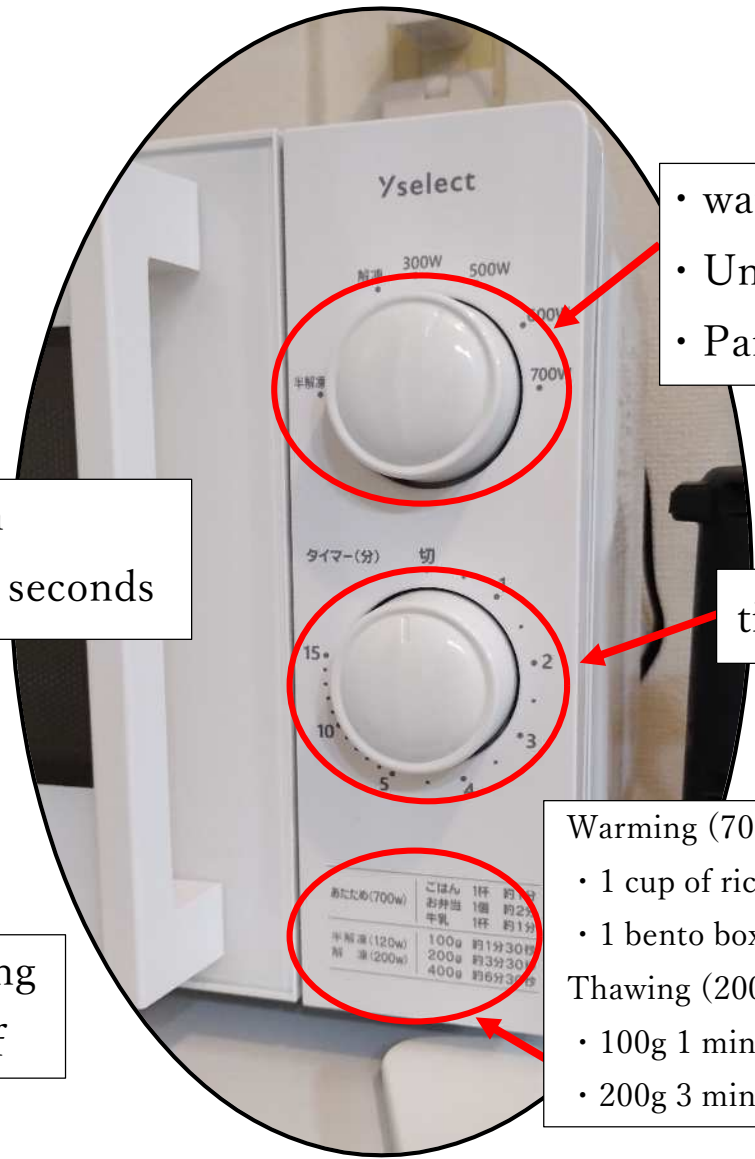

- wattage
- Unzip
- Partially thawed

timer

Warming (700W)

- 1 cup of rice: about 1 minute
- 1 bento box: about 2 minutes

Thawing (200W)

- 100g 1 minute 30 seconds
- 200g 3 minutes 30 seconds

あたため(700w)	ごはん 1杯 約2分
	お弁当 1個 約2分
	牛乳 1杯 約1分
半解凍(120w)	100g 約1分30秒
解凍(200w)	200g 約3分30秒
	400g 約6分30秒

# INSTRUCTIONS OF HOME APPLIANCES

## Entrance intercom



The phone rings and an image appears on the LCD display.



Press the "Talk" button and speak into the microphone



When you're done speaking, press the "End" button



Unlocking

Calls

End

## How to use a dryer



### Drying time guide

(At room temperature of 20°C)

Dressshirt(5 sheets) About 30 minutes	Underwear(5 sheets ) About 60 minutes
Blouse (8 sheets) About 30 minutes	Towel(15 sheets) About 60 minutes

※Drying time varies depending on room temperature and the type and amount of fabric.

For every 10° C drop in room temperature, the drying time will increase by about 10%.

# How to use a dryer

When "cd" is displayed, the clothes are cooled in the delivery mode.

Display of amount and remaining time (about minutes)  
30 minutes/100 yen



## 100 yen coin slot

• Continuous coin insertion and additional coin insertion during operation are possible.

## Operating Procedure

- ① Open the door and make sure there is no other person's laundry in the drum.
- ② Spread out each laundry piece and place it into the drum and close the door.  
(When closing the door, be careful not to get laundry caught.)
- ③ Please insert a 100 yen coin. Drying will begin.  
(Opening the door will stop the dryer so you can check the drying condition. Close the door to restart the dryer.)

※This machine is for 100 yen coins only, so if you insert other coins, they will not be returned.

# How to use the washing machine

## Digital display, operation buttons



100 yen slot  
Amount used=200 yen



# How to use the washing machine

Laundry order. (During operation, the digital display shows the remaining time.)

① Please make sure there is no other person's laundry in the washing machine.

② Please insert the coins shown. The amount inserted will be displayed inside the lamp.

④ Wait until the "lid lock" light goes out before adding laundry and detergent.

## Be careful when inserting coins.

- Do not insert coins when an error (888, 222, etc.) is displayed, or when the "remaining time" is displayed. Coins are invalid. Coins will not be returned.
- Only 100 yen coins can be inserted. However, if extra change is inserted, no change will be returned.

**洗濯の順序** ■運転中は、デジタル表示部に「残り時間」を表示します。

**1** ①洗濯槽内に他の人の洗濯物が入っていないか確かめてください。  
②表示の硬貨を入れてください。  
•投入金額を表示します。

**2** ③硬貨を入れてから10秒以内に洗濯槽シャワーボタンを押してください。  
•洗濯物・洗剤は入れないでください。  
•洗濯槽洗浄中は、ふたロックされ、表示ランプが回転します。

**3** ④「ふたロック」ランプが消えてから、洗濯物・洗剤を入れてください。

**洗濯物の目安**  
目安ラインより下に洗濯物を入れてください。  
衣類を入れすぎると、衣類が洗濯槽から飛び出して破れる恐れがあります。

•洗濯終了後は、上ふたを開けておいてください。(洗濯槽内の換気のため)

**硬貨を投入するときの注意**

- 変形した硬貨、ぬれた硬貨、洗剤のついた硬貨は投入しないでください。100円投入口へ100円以外の硬貨を投入されると返却口へ戻ります。
- エラー(888, 222など)を表示しているとき、及び「残り時間」を表示しているときは、硬貨を投入しないでください。投入されても無効です。硬貨も返却されません。
- 投入硬貨は、100円のみ使用できます。ただし、余分に投入されてもつり銭は返却されません。

**ソフト剤のご使用方法**

- 「ソフト剤投入」ランプが点滅中に「ふたロック解除」ボタンを押し、ふたロックを解除してから入れてください。
- ランプ点滅時期は「残り時間」の表示が13~11分の時です。

**洗濯機の据え付けについて**

**警告**

感電の恐れあり  
アースは確実に取り付けてください。

感電や漏電火災の恐れあり  
湿気の多い場所には据え付けしないでください。

2019年製

75100A

③ After inserting the coin, press the "Washing Tub Shower Button" within 10 seconds.

※ Do not put laundry or detergent in the machine.

※ While the washing machine is cleaning, the lid will be locked and the indicator light will rotate.

## How to use fabric softener.

 
- While the "Add fabric softener" light is flashing, press the "Unlock lid" button to unlock the lid.
- The lamp will flash when the "remaining time" display shows between 13 and 11 minutes.

## Nearby convenience stores and restaurants

SEVEN-ELEVEN(Open 24 hours)




LAWSON(Open 24 hours)

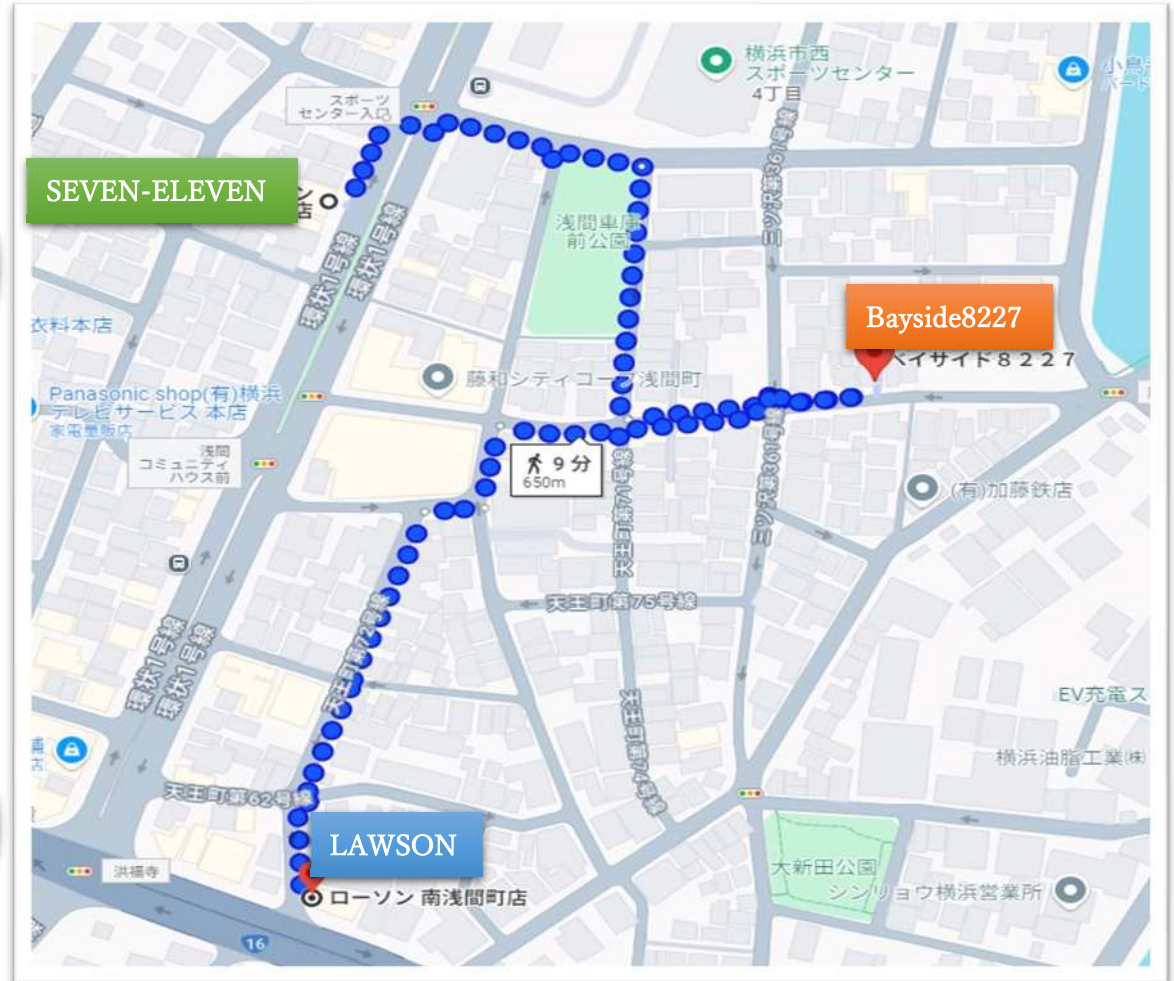

## Nearby convenience stores and restaurants

 Supermarkets and restaurants(9:00-22:45)

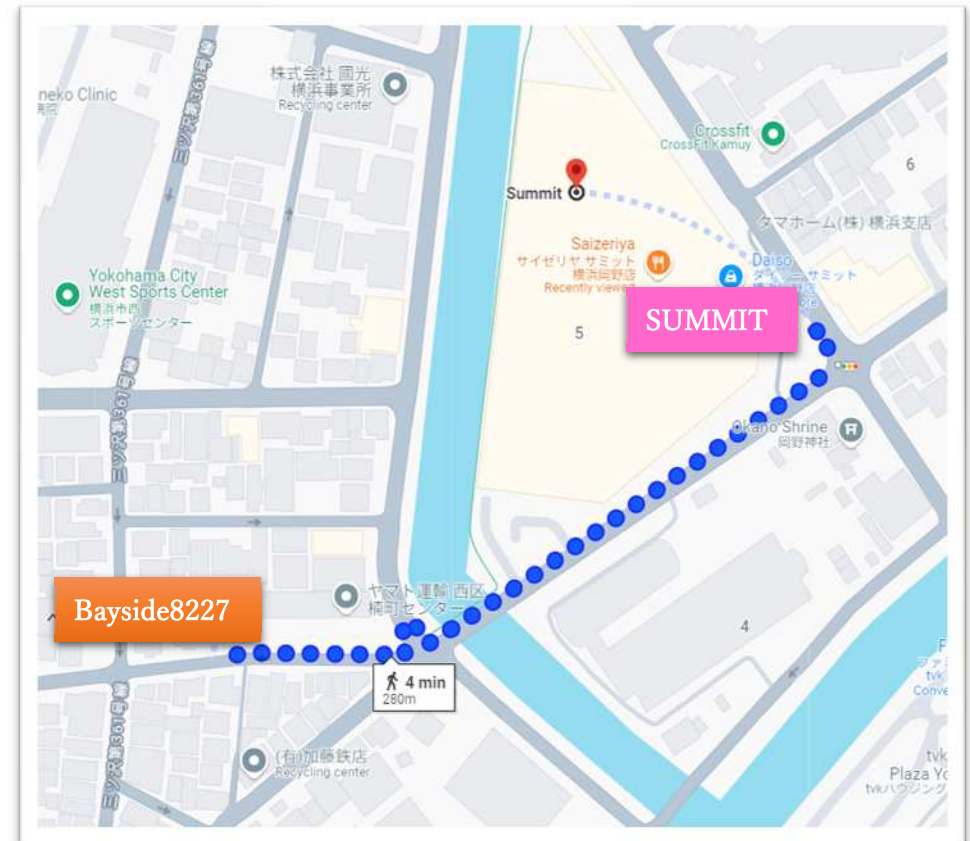

### 【Shops】

• Summit	(Supermarket)	9:00-22:45
• HAMA-SUSHI	(Everyone loves sushi ! )	10:00-22:45
• KFC	(Kentucky of the World ! )	10:00-21:00
• Saizeriya	(Italian wine and cafe restaurant)	9:00-22:00
• Tomod's	(Drugstore)	10:00-22:45
• DAISO	(Almost 100 yen shop)	9:00-21:00