



INSTRUCTIONS OF HOME APPLIANCES

Air conditioner remote control

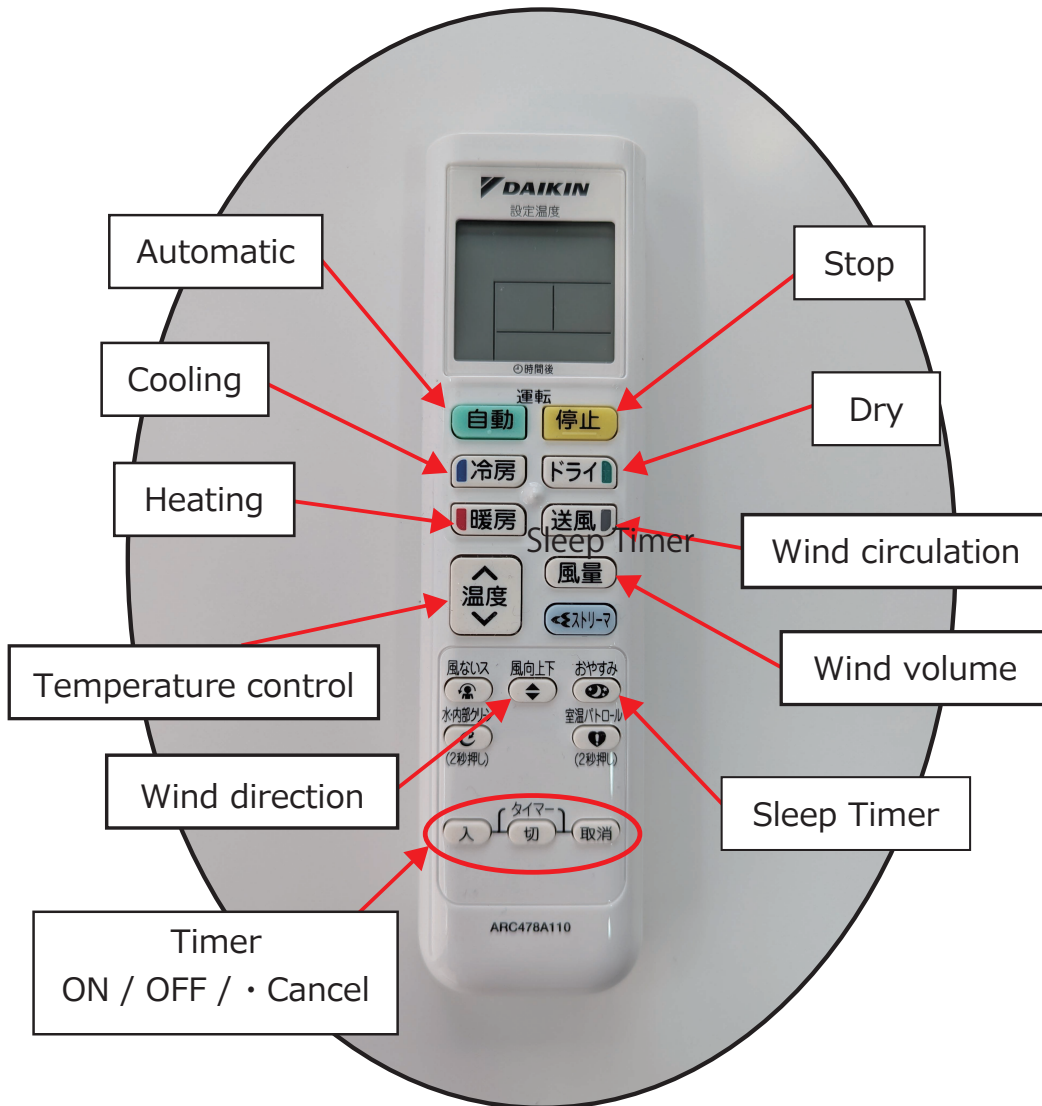

TV remote control

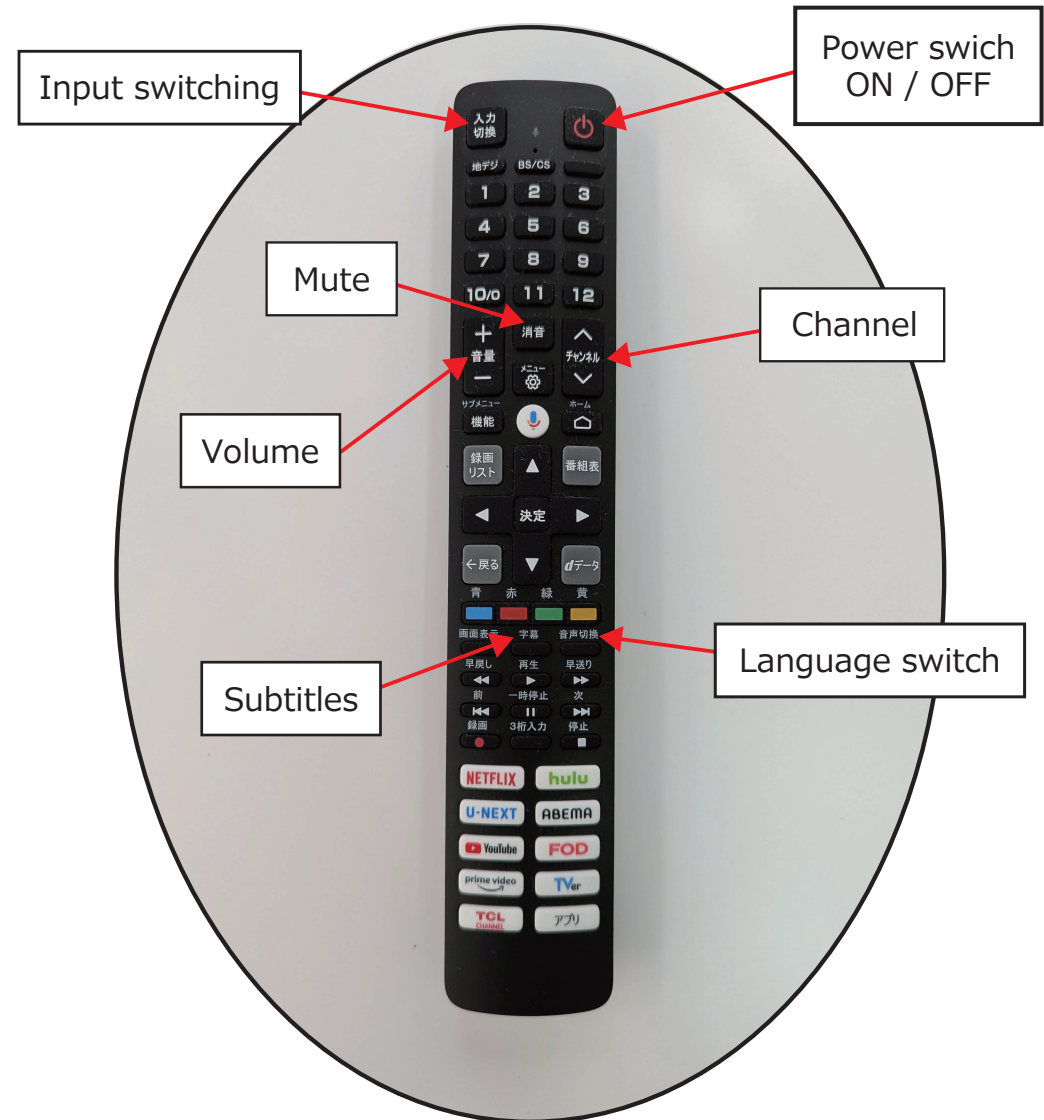

INSTRUCTIONS OF HOME APPLIANCES

Breaker


Ampere Breaker

An ampere breaker will trip if too much electricity is used throughout the house.

For this reason, turn off all electrical appliances that you are using.

After that, turn the ampere breaker on.


If you use electrical appliances in the same way as before the breaker tripped, there is a high chance that it will trip again, so turn them on one by one to avoid using too much at once.

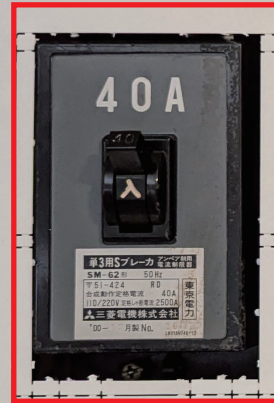

※Please do not use hair dryers, electric kettles, and microwaves at the same time, as this will cause the circuit breaker to trip.

Safety Breaker

The power has been tripped due to excessive use of electricity in that room, so turn off all electrical devices in the room. Then turn the safety breaker on.

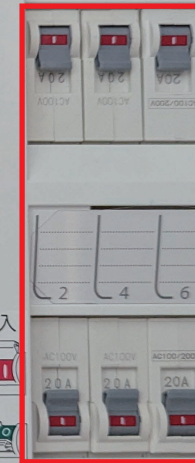

Earth leakage breaker

1. Turn off all safety breakers once
2. Turn on the earth leakage breaker
3. Turn on the safety breakers one by one
4. If the earth leakage breaker trips again during the process, there is a high possibility that the circuit that was turned on at the time is leaking
5. Turn off the safety breaker of the circuit with the leak
6. Turn on the earth leakage breaker again
7. Turn on the safety breakers of the circuit other than the one with the leak
8. If you cannot determine the cause, or if it is likely due to deteriorated wiring, contact the management company and have them deal with the problem.

INSTRUCTIONS OF HOME APPLIANCES

Induction stove




Microwave Oven




INSTRUCTIONS OF HOME APPLIANCES

Washlet

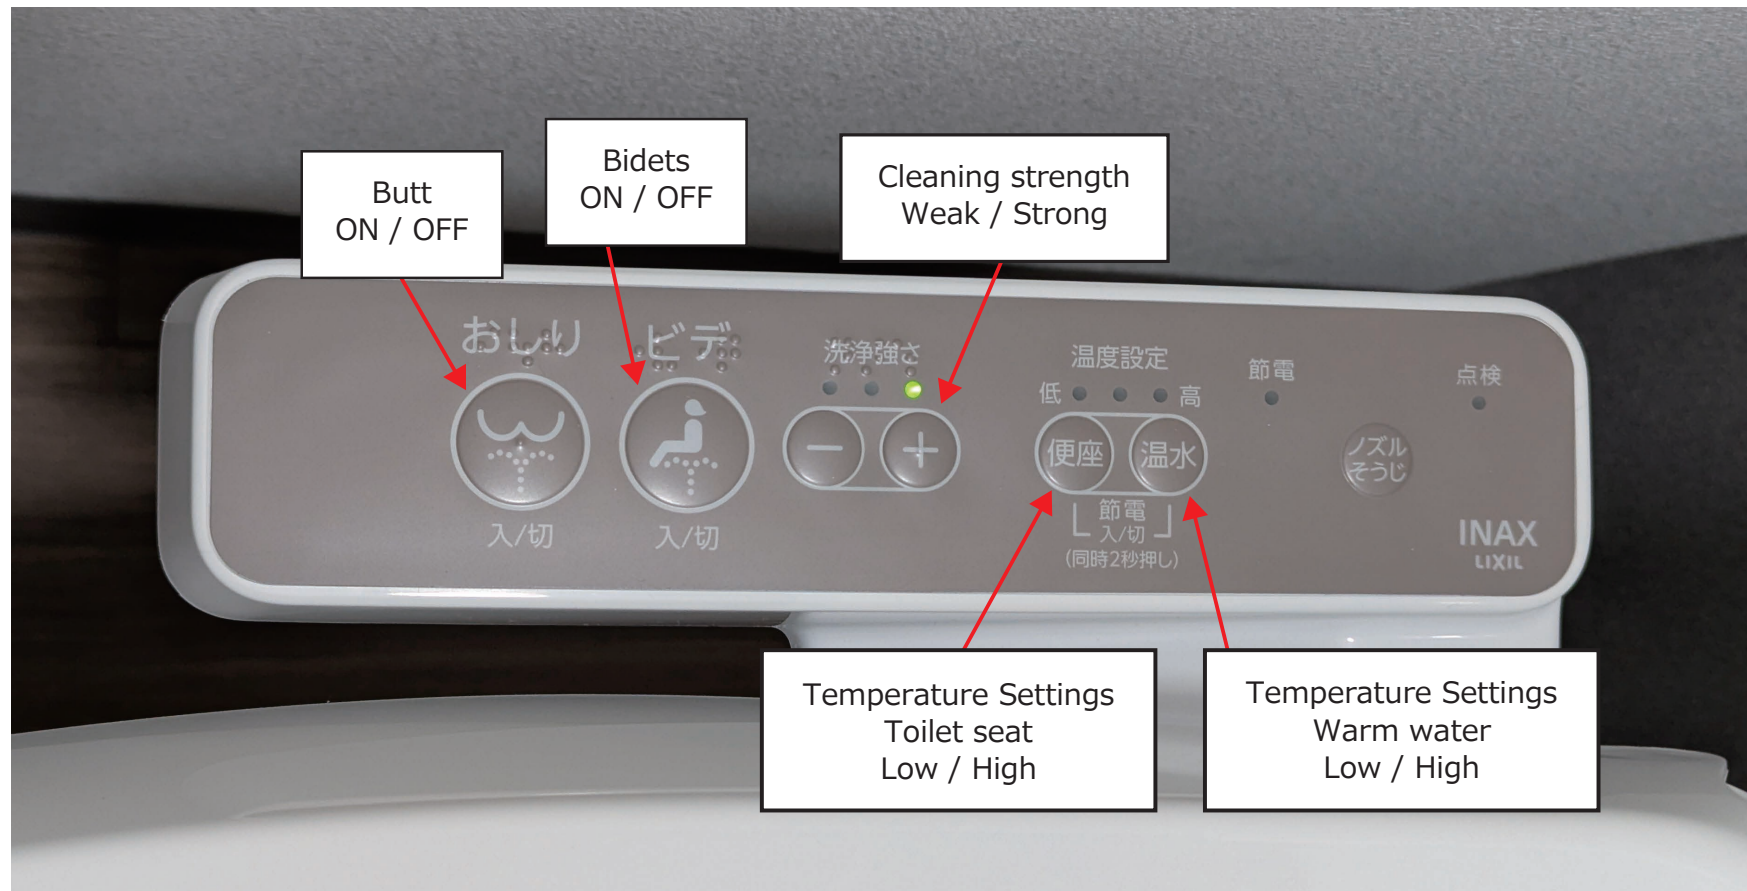

INSTRUCTIONS OF HOME APPLIANCES

Washing Machine

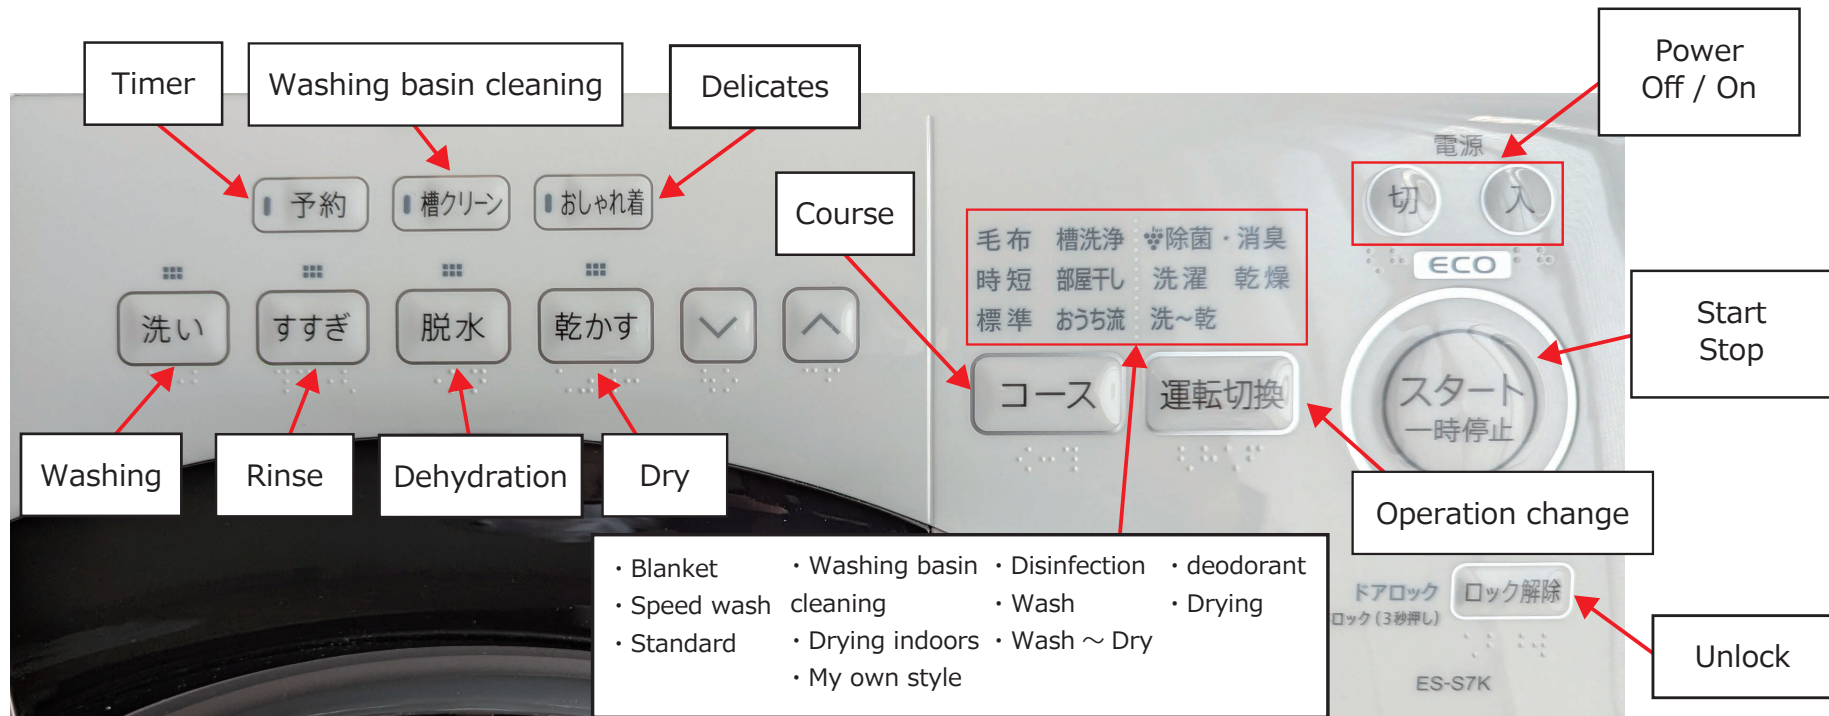

【Where to put detergent】

